

## System Power Configuration

**Dual MPSM-9**



PH2-xx

**Single MPSM-9**



PH1-xx

System Configuration	IBM-U	IBM-M	2 MPSM-9**	1 MPSM-9*
<b><i>One module type—full chassis</i></b>				
12 MM		✓		✓
12 SM		✓	✓	
12 PM	✓		✓	
12 DM	✓			✓
<b><i>One module type—partial chassis</i></b>				
1 to 12 MM		✓		✓
1 to 6 SM		✓		✓
7 to 12 SM		✓	✓	
1 to 6 PM	✓			✓
7 to 12 PM	✓		✓	
<b><i>Mixture of module types</i></b>				
A mixture of MM and SM		✓	✓	
A mixture of MM, SM, PM, DM	✓		✓	
<b><i>Exceptions</i></b>				
Call <i>evsl</i> for possible alternate configurations.				

\* 1 MPSM-9 requires a PH1-16 or PH1-30

\*\* 2 MPSM-9 requires a PH2-16 or PH2-30